


Steering wheel remote control interface for:

Renault/Nissan/Opel

Model, Year: Renault Master III (4G) 2019 →
Nissan NV400 (All) 2020 →
Opel Movano (B) 2019 – 2021

Kit Content: SWRC CAN Bus interface,
wiring harness, radio adapter
antenna adapter

Compatibility: for vehicles with radio
preparation or 1 DIN radio

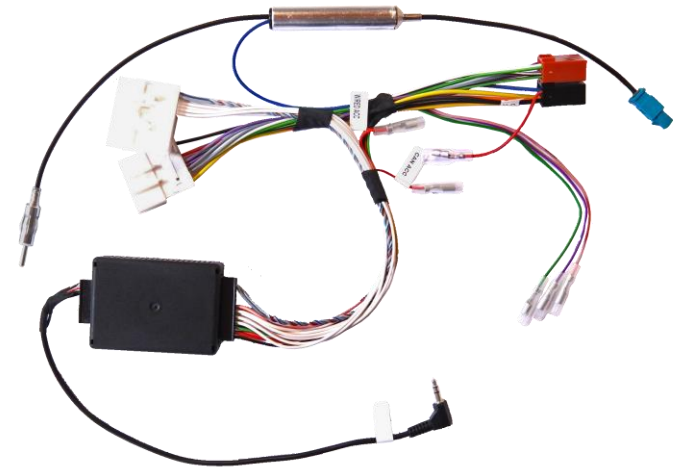


INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
10/2021 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
10/2021 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

Content and wiring harness connections

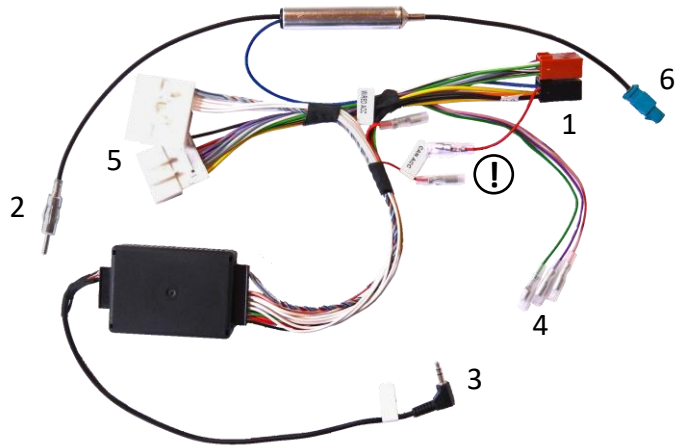

ATTENTION!

In order to prevent ESD damage, the WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

Connect cables to the radio side as follow:


- 1 - to RADIO POWER harness ISO CONNECTOR (black and red housings)
- 2 - to RADIO ANTENNA CONNECTOR
- 3 - to RADIO STEERING WHEEL REMOTE SOCKET
(NOTE: do not connect to microphone socket)
- 4 - to SERVICES (if required); functions are marked on the wires:
 - Green – PARKING BREAK output
 - Violet/White – REVERSE output
 - Pink – SPEDDPULSE output

Connect cables to the car side as follow:

- 5 - to CAR CONNECTORS
- 6 - to CAR ANTENNA CONNECTOR

⚠ There are two possible ACC signals:

- 1 the aftermarket radio will switch off when the car key is in the zero position. The red wire is connected to WIRED ACC.
- 2 the aftermarket radio will switch off when you either pull out the car key, or when the keys is in the zero position and you open the car door. The red wire is connected to CAN ACC.

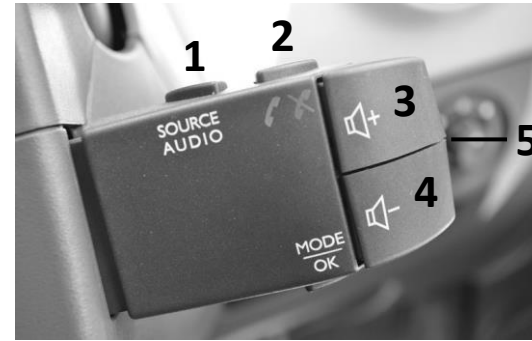

The steering wheel buttons perform the following functions (if supported by the radio):

- 1- Source
- 2- Accept incoming call / Reject incoming call
- 3- Volume +
- 4- Volume -
- 5- Mute
- 6- Scroll up > Seek up
Scroll down > Seek down

cut along the dotted line - copy for the vehicle owner